My Fireplace APP OPERATION INSTRUCTIONS



CONTENTS

Download the APP and Register an account	1
Add device	2
Fuction instructions ————	5
Device information ————————————————————————————————————	10
Rename your device	10
Create a home	11
Add member	11
Share device	13

Download the APP and Register an account

1 Download "Tuya Smart" APP. 2 Click "Sign Up".







3 Choose your country. Enter your mobile number or a valid Email address to get verification code.





4 Enter the verification code.



5 Set password to complete the registration.



Add device

1



Click "Add Device" or "+".

Olick "Small Home Appliance" from the list, then click "Fireplace(Wi-Fi)".

3 Select WiFi network and enter the password. Click "Next".

۱1

3



- NOTE: Make sure your router is using a 2.4 GHz channel. The distance between the router and fireplace isn't less than 50cm.
- Turn on the appliance, then press and hold the WiFi button 4 until you hear 3 beeps. The WiFi indicator and fuel bed start to flash.

5 Choose the EZ Mode, confirm the indicator is flashing and click "Next".









7	Added. Fuel bed becom-
	es in green and stops to
	flash.

8 Click "Done" to complete pairing.





If the pairing is failed in EZ Mode, please try AP Mode.

9 Press the WiFi button, you will hear 3 beeps, then keep pressing until you hear other **5 beeps** and the indicator flashes quickly.



Choose the AP Mode, confirm the indicator is flashing and click "Next".





Click "Go to Connect".





13 Go back to the APP. Start to add device.





14 Adding device.

Added. Fuel bed becomes in green and stops to flash.



16 Select the right home, click the name of fireplace to enter the homescreen.



23 FLAME C) **O** FLAME

Fuction instructions

FLAME MODE



HEATER MODE



NOTE: Only when you set a weekly timer to the flame or heater, the AUTO mode willl work properly. — 5 —

FLAME ADJUSTMENT







FUEL BED ADJUSTMENT







SET FLAME PROGRAM: Up to 4 time periods a day. 3 different weekly schedules.









10:56 v			::!!	* •
< Back				
Set Weel	dy Timer For	Flame:		
	Start		End	
13	1 06:00			
` 4	2 17:00			
•	00:00			
•	00:00			
Repeat	2			
Mon T	ues Wed	Thur i	ini Sat	Sun
· •				
	Start		End	
•	00:00			
	00:00			
•	00:00			
•	00:00			
	ancel		Save	



- 7 ----

TEMPERATURE UNIT







SET HEATER PROGRAM: Up to 4 time periods a day. 3 different weekly schedules.



11:07				uti 🗢 🖿
< Back				
Sot Wo	ekly Time	r For	Heator:	
	Start		End	Temp
۲	07:00	4		
۲	11:00			22°C
۲				
Repeat				
Mon	Tues W	ed 1	Thur Fri	Sat Sun
	Start		End	Temp
۲				
۲				
۲				
	Cancel			Save
	-			



MANUAL HEATING ADJUSTMENT







TIMER







Device information

Virtual ID, IP, Mac, Timer Zone and so on.



Nor59 4 ## * * Comparison ## * Fireplace > Device Information > Tap-to-Run and Automation > Device Cit if Not Incation > Off ine Notification > Others > Croate Group > HAQ & Hoodback > Add to Home Screen > Chock Dovice Network Etheck New >



Rename your device

1 Click " 🗹 ".



2 Click " \angle ". You can create a new name for your device.





Create a home

1 Click "Home Management". 2 Click "Create a home".

9.40 *



3	Enter home name, sel-
•	ect home location and
	rooms, Click "Save".



4 Click "Done", the home



Add member

Select "Me" → "Home Management" → "Name of Home" → "Home Settings". Select "Add Member".

NOTE: DownLoad the APP for your new member firstly.







Select 1: "APP account". NOTE: It's the new member's account, not your own's.



9:08 4		
Cancel	Add Member	Save
Name	Please enter a home me	mber name
Region	China	
Account	Please enter your accou	nt
Only after woon secone a tamily	oting the inviction of the acrount management of the second second second second second second second second se	it owner oant functions
Fami y Role	Commo	n Memoer 🔾

3 Select "Others" to get invitation code. Then go to "Me > Home Management > Join Home" and enter the code. Select the Home and ready for operate the appliance.







Share device



Fireplace Fireplace Living Room Living Room COSE 23°C COSE MANUAL AUTO HEATER LOW HIGH AUTO HEATER LOW HIGH AUTO

10:20 7	
Fireplace	∠>
Device Information	>
Tap-to-Run and Automation	>
Others	
Share Device	>
Create Group	2
FAQ & Feedback	>
Add to Home Screen	>
Chock Dovice Notwork	Chock Now >
Remove Device	

2 Click "Share Device".



3 Click "Add Sharing".





5 Input an account and click "Done".



Distributor: IN & OUT HOUSE GmbH Landrat-Kaptain-Str. 51 52372 Kreuzau Germany

Email: info@in-out-house.de